



MLT4060M/MLT4060K • MLT4080M/MLT4080K Supplement



This supplement is meant to be used in conjunction with the Magnum Operating & Parts Manual provided with the unit. Please refer to the Magnum Operating & Parts Manual for complete operation and safety instructions!

Introduction

This supplement is to be used in addition to the Magnum manual (Part Number 10454, Rev. A) received with this unit. Make sure to read and fully understand all safety and operating instructions in the Magnum Operating manual before attempting to operate the equipment.

Table of Contents:

	Page:
Introduction	1
Table of Contents	1
Parts	1 - 2

Parts

The following table lists changes to the MLT4060M/K and MLT4080M/K since publication of your manual. The table includes added and deleted parts, as well as when they were changed and the page in the manual that the original (deleted) part can be found. Any part being deleted without adding a part means the part is no longer used on the unit. Any part being added without deleting a part means the part has not previously been used on the unit.

Date	Page No.	Item No.	Part No.	Description	Added	Deleted	Notes
02.12.09	39	7	14682	Bracket, battery hold-down		1	
02.12.09	39	7	12924B	Angle, battery hold-down - black	1		Start Serial No. 0900286
02.12.09	39	8	60984	Bolt, J - .250-20 x 7.00		2	
02.12.09	39	8	14146	Bolt, J - .250-20 x 10.00	2		Start Serial No. 0900286
02.12.09	39	9	14145	Battery tray		1	Start Serial No. 0900286
04.07.09	39	N/A	13768B	Cover, ballast wire	1		Start Serial No. 0900298

Date	Page No.	Item No.	Part No.	Description	Added	Deleted	Notes
04.07.09	39	N/A	60825	Screw, .312-18 x 3" std hex	3		To attach newly added ballast wire cover.
04.07.09	39	N/A	60303	Nut, .312-18 nylock	3		To attach newly added ballast wire cover.
04.07.09	39	N/A	60028	Screw, .312-18 x 1" std hex	14		Omitted from original manual: Used to attach ballasts to frame.
04.07.09	39	N/A	60271	Washer, .312-18 split lock	14		Omitted from original manual: Used to attach ballasts to frame.
04.07.09	39	N/A	60243	Washer, .312-18 flat	17		Omitted from original manual: Used to attach ballasts to frame and newly added ballast wire cover.
04.07.09	39	N/A	60505	Nut, .312-18 u-clip	14		Omitted from original manual: Used to attach ballasts to frame.
04.23.09	33	13	65510B	Bracket, sensor mtg		1	
04.23.09	33	13	13796B	Weldment, prox sensor brkt	1		